




FUJI

RUBBER INSTALLATION:

WWW.FUJIMATS.COM

1-800-663-0629

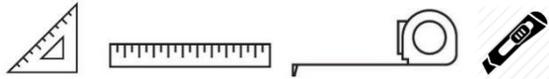

INSTALLATION – ROLL MATERIAL:

1. Make the assumption that the walls you are butting against are not straight or square. Using a chalk line, make a starting point for an edge of the flooring to follow.
2. Remove the Rubber from the shrink-wrap and unroll it onto the floor. Lay the Rubber on the floor in a way that will use your cuts efficiently. Cut all rolls at the required length, including enough to run up the wall.
3. Allow the cuts to relax in position for a minimum of two hours. 24 hours is preferred.
4. Place the edge of the first roll along the chalk line.
5. Position the second roll with a slight overlap over the first roll at the seam. Work the material back to eliminate the overlap. This procedure will leave tight seams and eliminate any gaps.
6. Repeat for each consecutive roll necessary to complete the area or those rolls that will be installed that day.

METHOD 1 – GLUE DOWN

1. Apply Adhesive to the substrate using a 1/16" square-notched trowel.
2. Fold over the first "drop" along the wall (half the width of the roll). c. Spread the adhesive using the proper size square-notched trowel. Take care not to spread more Adhesive than can be covered with flooring within 30 minutes. The open time of the adhesive is 30–40 minutes. NOTE: Temperature and humidity affect the open time of the adhesive. Temperatures above 70°F and/or relative humidity above 50% will cause the adhesive to set up more quickly. Temperatures below 70°F and/or relative humidity below 50% will cause the adhesive to set up more slowly. The installer should monitor the on-site conditions and adjust the open time accordingly.
3. Lay the flooring into the wet adhesive. Do not allow the material to "flop" into place; this may cause air entrapment and bubbles beneath the flooring.
4. Immediately roll the floor with a 100 lb. roller to ensure proper adhesive transfer. Overlap each pass of the roller by 50% of the previous pass to ensure the floor is properly rolled. Roll the width first and then the length.

5. Fold over the second half of the first roll and half of the second roll. Spread the adhesive. Spread the adhesive at right angles to the seam to prevent the adhesive from oozing up through the seam. Roll the flooring.
6. Continue the process for each consecutive drop. Work at a pace so that you are always folding material back into wet adhesive. NOTE: Never leave adhesive ridges or puddles. They will telegraph through the material. h. Do not allow Adhesive to cure on your hands or the flooring. Immediately wipe off excess adhesive with a rag dampened with mineral spirits! Cured adhesive is very difficult to remove from hands. Wear gloves while using Adhesive!
7. If some seams are gapping, temporarily hold them together with masking tape. Do not use duct tape as it may leave a residue on the floor. Remove the tape after the adhesive develops a firm set.
8. Keep traffic off the floor for a minimum of 24 hours. Foot traffic and rolling loads can cause permanent indentations in the uncured adhesive.

METHOD 2 – TAPE DOWN

1. Make the assumption that the walls you are butting against are not straight or square. Using a chalk line, make a starting point for an edge of the flooring to follow.
2. Remove the Rubber from the shrink-wrap and unroll it onto the floor. Lay the Rubber on the floor in a way that will use your cuts efficiently. Cut all rolls at the required length, include enough to run up the wall. (trim this excess last)
3. Allow the cuts to relax in position for a minimum of two hours. 24 hours is preferred.
4. Place the edge of the first roll along the chalk line.
5. Dry lay the rolls onto the subfloor.
6. Draw a pencil line at all seams to be taped.
7. Use a high-quality double-faced carpet tape. You can order 3.75" Wide Commercial Specialty Tape from www.fujimats.com
8. Fold over the first drop along the chalk line (half the width of the roll).
9. Apply the tape along the seam, one half on each side of the pencil mark. Remove the release paper and place the flooring onto the exposed tape.
10. Position the second roll with a slight overlap over the first roll at the seam. Work the material back to eliminate the overlap. This procedure will leave tight seams and eliminate any gaps.
11. Hand-roll the seams to ensure adequate contact. Do not roll the entire floor.
12. Repeat until complete. Tape Edges and Doorways as well.

