

FUJI MATS


Wall Pad Installation: Wood Or Metal Studs

Tools
Needed:




Stage Your Wall Pads In Place

Snap a level chalk line at the height of your pads. [6' from the floor, not the mat]
(typically, your wall pad lip should sit to the floor, so put wall pads in before your FUJI Mats)

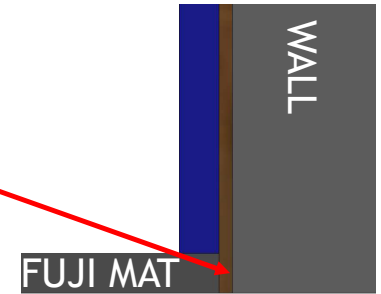

Nailer Strips can be secured to your studs with a nail gun or screws above the chalk line.
(Tip: rip to size or buy or 1/2" thick fur strips for the Nailer Strips)


Nailer Strip Size: The height (nominal) of Top Cap less -1". Thickness = 1/2" (nominal)
Ex: a Top Cap using a 1x4 (nominal = 3/4" x 3.5"). So, 3.5" - 1" = use 2.5" Top Nailer Strips (1/2" x 3" Material)

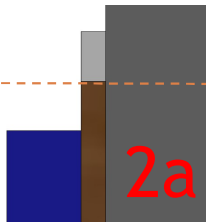

Top Cap:

Paint or stain.
Then, secure to both the Nailer Strip and through the wall pad lip with a finish nailer or screws.

(Tip: spray paint your nails or screw heads to match the cap color. A nice touch!)

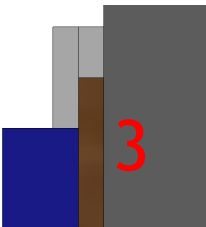

Skip Step 2a (option) and just use a Top Cap over the 1" Top Lip. Follow Step 3 with a 1" tall Top Cap.

