


FUJI Wall Pad: Trim Kit Installation

Nail / Screw a 3/4" tall x 1/2" thick rip of trim/wood/plywood to your wall above the top lip of the FUJI Wall Pad Backing. Secure to studs 16" OC as needed.

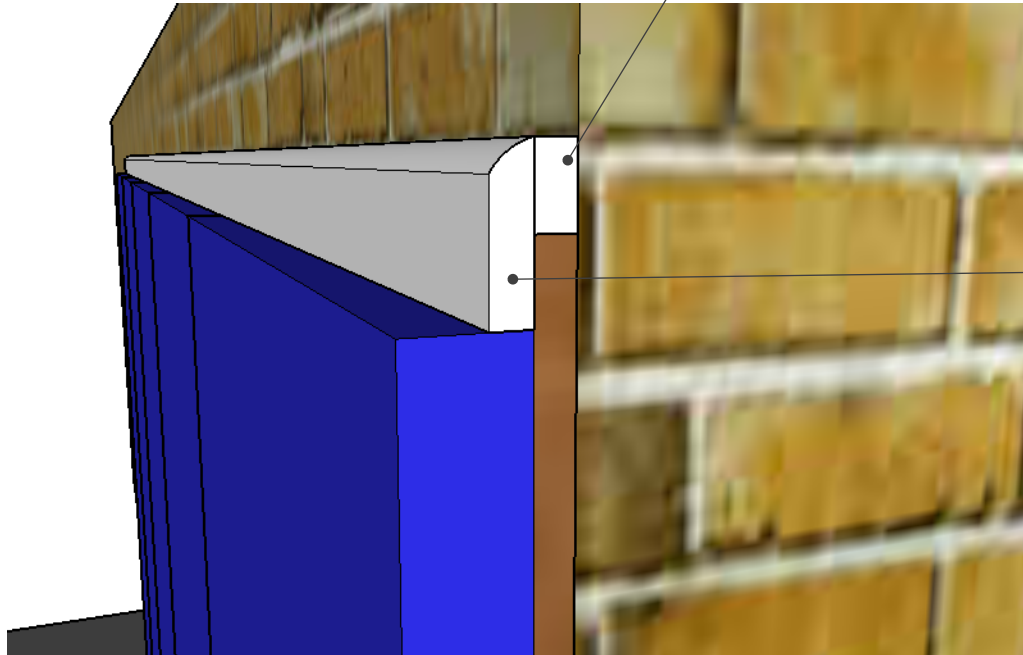

Install the cap piece and screw or use a trim nailer to secure to the wall pad lip as well as the top nailer.

Paint or stain as desired.

[Size: Wall Pad Lip height + Nailer height] and Thickness of 1/2"-3/4"

