




# Mat trim & re-wrap instructions:


[WWW.FUJIMATS.COM](http://WWW.FUJIMATS.COM)

1-800-663-0629



Snugly fit your FUJI Mats to your training area. Eliminate all gaps before measuring to cut the final mats to pressure-fit to your space.

*Note: Wrapping the edges is not typically necessary where the exposed edge butts into a wall pad or wall and is hidden from view and sweat/moisture. In cases where a surface cut or error is exposed, re-seal the surface with a dab of [VLP](#) or similar.*

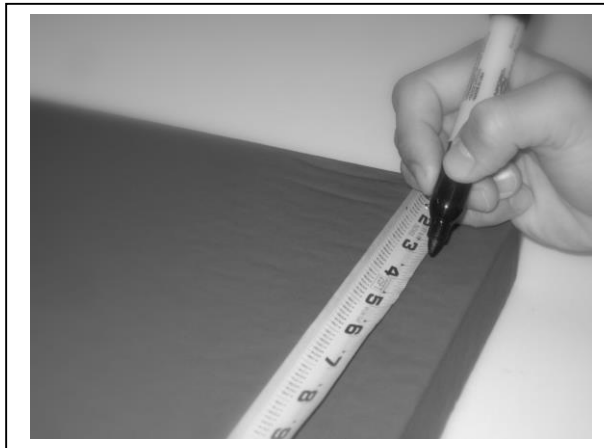

Mark the edge to be cut, ~4 inches longer than desired final length.

This will be Cut #1. It is only necessary to cut through the mat's vinyl surface.

Use a straight-edge or a T-Square to make Cut #1 with a utility knife.

[Note: you can also use a skill saw, table saw, or a jigsaw to make this cut. A extendable utility knife works great though!]




Next, mark the edges on the side of the mat with a pencil, 4 inches from your initial surface cut [Cut #1]. This mark is made exactly where you would like the new finished edge.



From the pencil mark, cut the side of the mat cut vertically towards the bottom. Depth isn't important, but get through the vinyl at least.

Cut from Cut #1 to the vertical cut you just made. This should be just a fraction of an inch down from the surface.

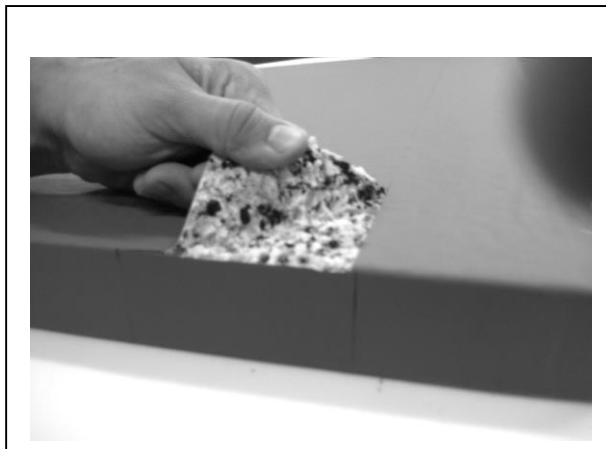

Pull back the vinyl from the foam.

You'll tear the vinyl from the foam from Cut #1 to the vertical cut. Keep this piece intact, and do not go too far with it. This is your re-wrap material.



Continue along the entire cut. Only pull back to where you need the end to be.

Have a friend hold back the flap (or tape it back) while you cut through the foam to remove the unwanted length.


\*Cut From the top so as to not puncture the vinyl surface.

Fold the excess over a table edge / 2x4 to help complete the cut.

Remove the excess and flip the mat over, face down.



Use a foam/vinyl adhesive. [3M Super 77 can be found at Home Depot, Menards, etc] *follow the instructions on the can.* Spray both the flap and the bottom will meet. Allow t o get tacky.

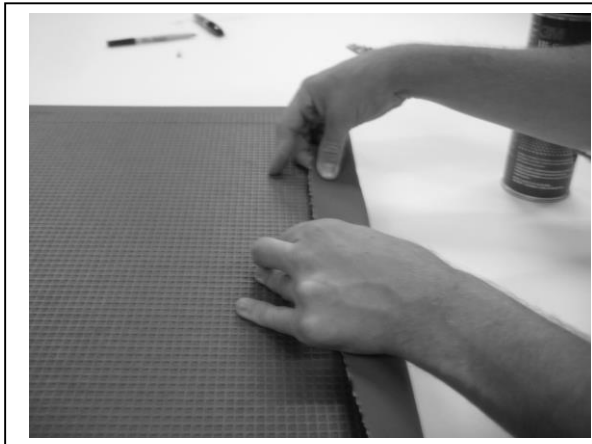

Press firmly and let the bond set and dry.

You're ready to put the FUJI mat into place!

Train Hard!

